

Fiero Shifter Pattern Labels

Paul Romsky
28 JUN 2023
Sheet 1 of 1




Visit: http://www.paul.romsky.com/index_fiero.htm
and download the PowerPoint and PDF versions of this file

These are cheap and easy labels to replace the worn out pattern on your shifter console. These will not hold up to liquids so clean them only with a dry rag. Silk Screening Labels on the Shifter Console is more durable but much more costly and time consuming – these are better than nothing.

You may have to print the Labels out using the **Scale to Fit** or **No Scale to Fit** options. On some printers you may have to **adjust the size by percent** to get the desired size. After getting the proper size, set the print for **best quality and highest resolution** and **print the final Label**.

You may have to **explore all printer options and tabs** - which vary by printer.

Explore all printer options and tabs

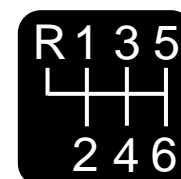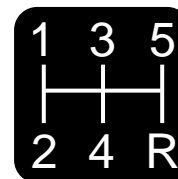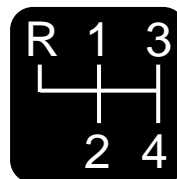

After printing:

Place the printout on a **very clean a smooth surface**.

Pull a **longer than needed** piece of **Transparent Tape** so that **no fingerprints or debris** are on the tape where it will be applied.

The **tape must be wider than the Label** so that there is no seam.

Carefully **cover the desired Label** with the **cleanest spot of the tape**.

Press the tape firmly down and rub on the Label so that **all air is squeezed out** through the paper.

Cut the tape all around right **where it touches the Label**.

Clean the area (on the **Shifter Console** where the Label will be applied) with **95%+ Isopropyl Alcohol** and **let dry**.

Using a **very clean finger**, spread a **very, very thin layer of Wood Glue** to the backside of the Label.

Cover every spot of the backside with glue, **especially in the corners**.

Apply only the minimal thin layer of glue to coat the Label but **not enough that it soaks into the paper**.

Once the glue is applied **you have less than 10 seconds** to affix it in place (make some dry practice runs first)

Apply the Label to the Shifter Console and **press firmly all around, especially in the corners**.

Let dry 30 minutes.